

HC-WATCH

Watch Video Camera Built-in DVR

Includes:

- Watch Camera
- Instructional manual
- USB Adaptor

Operation:

1. To turn on the camera you will need to press and hold the power button for two seconds until the blue light turns on and is solid. (The power button is the bottom left one when looking at the watch face.)
2. When you turn on the camera the light will be solid blue showing it is in standby mode.
3. To start the recording you will need to press the power button for one second. The blue light will flash three times then go off. The item is now recording video and will stay on until you stop it or the battery goes dead.
4. To save the video you will press the power button and the blue light will flash three times saving the video and going back into the standby mode.
5. To turn the power off you will stop any video recording and let it save. Once you are back in the standby mode (solid blue light) hold the power button for three seconds and the red light will flash and turn off. (When the battery is dead or if the memory is full it will save the recorded video and turn itself off automatically.)
6. To take a picture you will need to turn on the camera. When in standby model you can press the top left button to take a single photo. The red light will flash once confirming it was taken.

Connecting to PC:

1. Take the USB cable that came with the watch and insert it into your PC USB port.
2. Now take the smaller end and plug it into the side of the watch behind the cover. You will need to unscrew the button on the left side of the watch to insert the USB cable. (The cover looks like a normal button but can be unscrewed.)
3. Now you might have a screen pull up asking you what to do. You need to select the option to open to view the files to go into where it stores the video.
4. If your PC does not come up with anything automatically don't worry. You just need to select it manually.
5. Go to your start button in the taskbar on your desktop and click on it. Now on the right near the top you will need to click on Local PC or My Computer depending on your version of windows.
6. Once you click on Local PC it will pull up the list of hard drives and other removable devices.
7. Under the section that says Devices with Removable Storage you need to select the Removable Disk folder to continue.
8. When you open the folder you will see a second folder named DCIM. This is where it stores the video and images you took when recording.
9. Go into this folder and you will see the video clips you took and you can view them by clicking on them.
10. If you have trouble playing the video on your PC I would suggest you download the free player named "VLC Media Player" and can be found to download on the internet.
11. When you need to remove the camera from the USB cable that connects it to your PC. You will need to close the window for the item and safely remove the device before doing so. There is an icon that appears down by your clock when you connect a USB device. This looks like a green arrow above a grey box. If you click on this you can select to safely remove the device that is connected to your PC.
12. Doing this will prevent the item and data from being lost or damaged.

Charging:

1. Take the USB cable that came with the watch and insert it into your PC USB port.
2. Now take the smaller end and plug it into the side of the watch.
3. Once connected correctly the blue light will be on showing it is connected to the PC.
4. When the camera is connected and the blue light is on you will also see a red light flashing in the same place as the blue light. When the red light is flashing it means the camera is charging. When the red light stops flashing it is finished and fully charged.
5. When I tested this item it was hard to see the red flashing light unless I held the watch at a certain angle.

6. Please make sure to fully charge and discharge the battery 5 times to make sure the battery uses the maximum capacity and get the full time on a charge.

To set Date/Time

1. Take the USB cable that came with the watch and insert it into your PC USB port.
2. Now you might have a screen pull up asking you what to do. You need to select the option to open to view the files to go into where it stores the video.
3. If your PC does not come up with anything automatically don't worry. You just need to select it manually.
4. Go to your start button in the taskbar on your desktop and click on it. Now on the right near the top you will need to click on Local PC or My Computer depending on your version of windows.
5. Once you click on Local PC it will pull up the list of hard drives and other removable devices.
6. Under the section that says Devices with Removable Storage you need to select the Removable Disk folder to continue.
7. Once the WATCH is connected we can set the time.
8. A time setting file named time.txt on the WATCH.
9. You will need to open this txt file. Make sure the format reads 2014-12-09 13:10:59
10. Then save the file to the WATCH and remove from computer to record video.

Trouble shooting:

1. If you turn the camera on but it turns off after a short while. You will need to charge the camera to use.
2. If you cannot connect it to a PC or cannot download/upload files normally.
 - A. Check if the USB cable connecting the camera to your PC is in good condition and connected properly.
 - B. Check if the installation of the driver is done properly. (Windows 98 Only)
 - C. Check to see if the device has enough space to store video.

To delete video:

1. To delete the video you need to connect the camera up to the PC.
2. Take the USB cable and connect it into your PC. Now take the smaller end and plug it into the side of the watch.
3. Now you might have a screen pull up asking you what to do. You need to select the option to open to view the files to go into where it stores the video.
4. If your PC does not come up with anything automatically don't worry. You just need to select it manually.
5. Go to your start button in the taskbar on your desktop and click on it. Now on the right near the top you will need to click on Local PC or My Computer depending on your version of windows.
6. Once you click on Local PC it will pull up the list of hard drives and other removable devices.
7. Under the section that says Devices with Removable Storage you need to select the Removable Disk folder to continue.
8. When you open the folder you will see a second folder named DCIM. This is where it stores the video you took when recording.
9. To delete the video you just need to delete each video clip inside of the folder DCIM.
10. Each clip can be deleted, copied, or played from this folder. Once they are deleted they are gone for good.