PORTABLE VOICE CHANGER

SKU: VC300



USER MANUAL FCC CE

THANK YOU FOR PURCHASING THE PORTABLE VOICE CHANGER

Please read this manual before operating the portable voice changer and keep it handy.

The portable voice changer is perfect for anyone looking to disguise their voice. Bosses might want to call their employees to test customer service skills. Parents might want to call their teenagers at home alone to see if they are behaving. This voice changer lets you adjust the pitch of your voice a lot or little for any covert situation.

This unit comes with built-in microphone, an output for speakers or recording devices, and a 14-pitch range.

Your purchase should include:

1 x Portable Voice Changer

1 x Voice Projector with Velcro Attachment

Contact **770-694-6921** if you are missing any of these components.

GET FAMILIAR WITH YOUR PORTABLE VOICE CHANGER



Figure 1: Control Panel

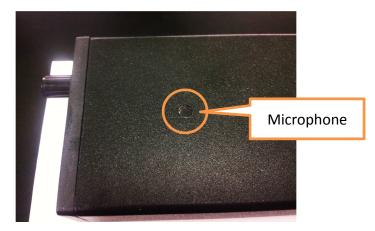


Figure 2: Microphone

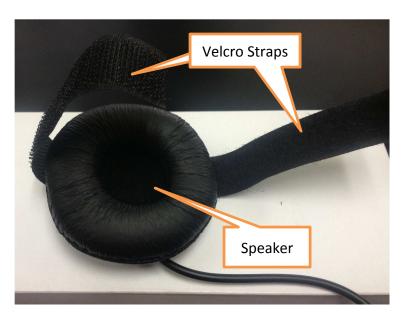


Figure 3: Speaker



Figure 4: Volume Adjustment

OPERATING THE PORTABLE VOICE CHANGER

- 1. Insert a 9V battery into the battery compartment at the far end of the voice changer. *9V battery is not included.*
- 2. Plug the speaker jack into the audio output
- 3. Put the On/Off Switch into ON position

IMPORTANT NOTICE: Before officially using the voice changer, test the pitches to find one you think works best for you situation. **This** voice changer is not designed to mimic celebrity voices.

- 1. Hold the speaker up to your ear
- 2. Talk into the microphone
- 3. Adjust the pitch until your voice is disguised as desired

Once you have selected the desired pitch to disguise your voice, use the Velcro straps to attach the speaker to the mouth piece on your landline or cell phone.











TROUBLESHOOTING

THE DEVICE WON'T TURN ON

• Make sure you have inserted a 9V battery into the device

THE SOUND OR VIDEO IS UNCLEAR

• The device needs replacing

OTHER PROBLEMS

• Call our technical support at 770–694–6921

SPECIFICATIONS

Water Resistant	No
Battery	9V