


### PERSONAL EMERGENCY ALARM

- The alarm may be placed in hand, pocket or handbag with the attached metal chain wrapped around the wrist so that if the user is being attacked or handbag snatched, the metal chain is pulled out and hence the alarm is activated.
- The loud piercing siren will continue sounding until the metal chain is plugged back in.
- Switch Alarm to "OFF" position in personal Alarm Function.

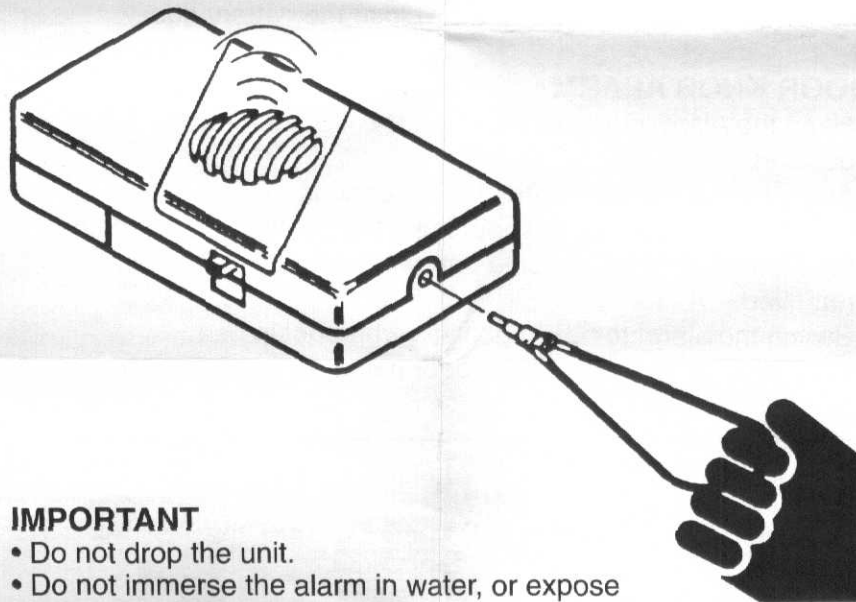

### IMPORTANT

- Do not drop the unit.
- Do not immerse the alarm in water, or expose directly to rain fall.
- Remove battery if the unit will not be used in some prolonged periods of time.
- Never leave exhausted, or old batteries in the unit as they will leak and cause damage.
- This alarm works on wooden doors, composite doors and plastic doors that have nonmetallic frames. Does not work on metal doors.

### SPECIFICATIONS

- Power Supply: DC9 volt
- Alarm Level Output : 120dB



## **PERSONAL SAFER: 2 IN 1 DOOR KNOB AND PERSONAL EMERGENCY ALARM**

For best performance, read instructions before use and keep for reference.

### **OPERATION**

Simply open the battery door at rear, insert one 9 volt battery as indicated by internal marking, then close the battery door.

### **DOOR KNOB ALARM**

- Hang the Alarm onto any metal door knob, then switch it to "ON" position.
- Alarm will be activated after 15-20 seconds.
- Whoever touch the door knob, the alarm should activated and the alarm sound will subside only when intruder's hand is removed.
- Switch the alarm to "OFF" position when not in use.

**NOTE:** Not for use with plastic door handles.

