

NR300

PENDING

Pocket ELECTRONIC WHISTLE



Instructions:

- Uncap battery lid and put batteries in according the +/- signs.
 - Point whistle in appropriate direction and press the button to activate whistle. Hold the button as long as you want it to beep.
 - Remove batteries when whistle is not used for long periods.
 - **POWER SAVING DESIGN, NO POWER CONSUMPTION WHEN NOT IN USE.**
- Handle with care and avoid water. Do not pound the whistle.

Cautions:

- ⚠ Keep away from children under 8 years old.
- ⚠ This product is not a toy and should not be used near ears.

Illustrations

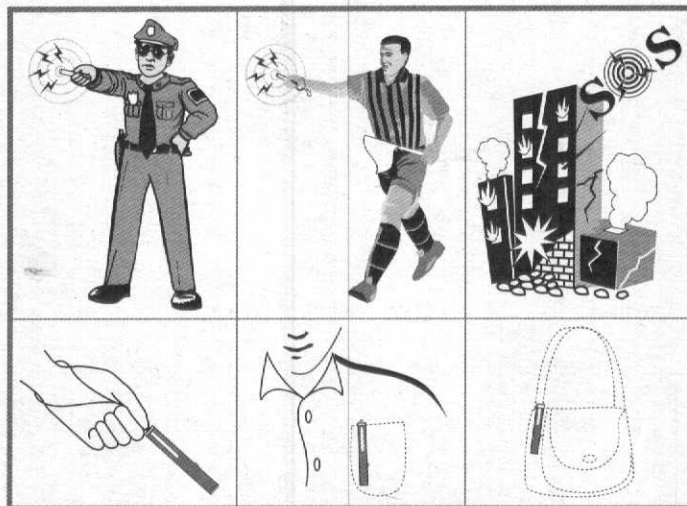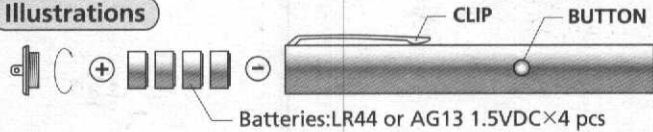

Specifications / Accessories

1. Length: 10 cm, Diameter: \varnothing 1.5cm.
2. Weight: 25 g (Batteries excluded).
3. Material: Metal housing.
4. Batteries: LR44 or AG13 1.5VDC × 4 pcs.
5. Sound: 120 dB \pm 2 (under 10 cm distance)



1~8 Age

Made in Taiwan

EXCLUSIVE

Pocket ELECTRONIC WHISTLE

Features:

- Compact and stylish housing design.
- Easy to operate by hand!
- Traditional whistle sound.
- **SUPER HIGH DECIBLES.**
- Handy and hygienic whistle.
- Control of whistle sound.
- Great for all sporting events.
- Use as a locator in emergency situations.
- Use as a safety alarm for crime prevention.

Suitable for:

Police, Lifeguards, Teachers, Referees,
Umpires, Tour Guides, Sport Trainers,
Cheerleaders, Traffic Guides, Police,
Military training, Dog Handlers,
and so on.



HP388